




Questions, problems, missing parts?


Before returning to your retailer, call our customer service at 1-800-544-4828
Monday – Friday 7:00 a.m. – 5:00 p.m. CST

PACKAGE CONTENTS

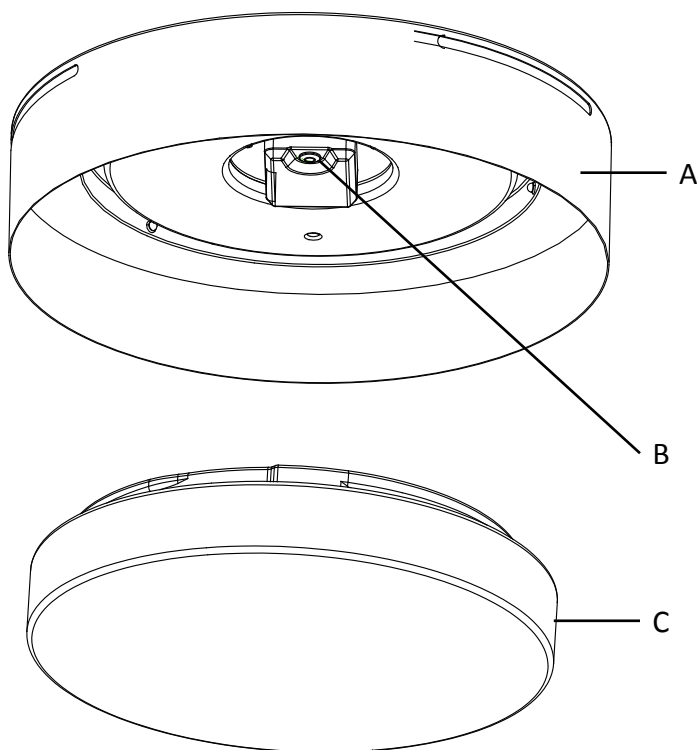

Part	Description	Qty
A	Fixture Body	1
B	CCT Selectable Push Button	1
C	Glass Shade	1

 TOOLS REQUIRED (not supplied)



Phillips Screwdriver



Wire Strippers



Safety Goggles



Electrical Tape

 


Ladder


HARDWARE CONTENTS Note: Hardware not shown actual size.



AA



BB

 


CC



DD



 EE



FF



GG

Part	Description	Qty
AA	Junction Box Mounting Screws	2
BB	Wire Connectors	3
CC	Mounting Bracket	1
DD	Fixture Mounting Finials (Pre-assemble to fixture)	2

Part	Description	Qty
EE	Safety Cable (Pre-assemble to fixture)	1
FF	Mounting Screws (Pre-assemble to mounting bracket)	2
GG	Fixture Mounting Washers (Pre-assemble to fixture)	2

PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- Turn off electricity at circuit breaker box (or main fuse box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.

CAUTION

- All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. If you are not sure your lighting system has a grounding means, do not attempt to install this fixture. Contact a qualified, licensed electrician for information with regards to proper grounding methods as required by the local electrical code in your area.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type and electrical rating required.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any modifications to this product will void the product warranty and could void the user's authority to operate the equipment.

FCC Supplier's Declaration of Conformity:
47 CFR § 2.1077 Compliance Information
Responsible Party: LEDVANCE LLC
1100 Tyrone Pike Versailles, KY 40383, USA
1-800-544-4828
Unique Identifier: 63470

ASSEMBLY INSTRUCTIONS

1. Turn Off Power.


Before beginning the installation, make sure all power is off at the breaker box.

2. Removing the installation bracket

Unscrew the mounting finials (DD) and washers (GG) from the fixture body (A) and remove the mounting bracket (CC) as shown below.




NOTE: Ensure to save the mounting finials (DD) and washers (GG) .

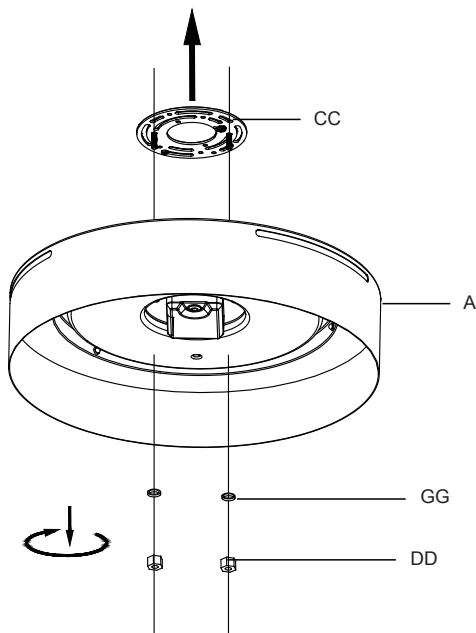

3. Installing Mounting Bracket

Align the mounting bracket (CC) holes to the junction box using the junction box screws (AA) and tight firmly..

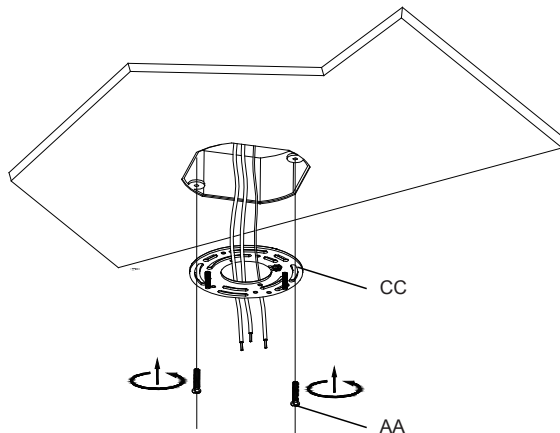


4. Making the electrical connections

Using the wire connectors (BB) provided , connect the black wire from the junction box to the black wire from the fixture, the white wire with white and the green from the fixture to the copper wire from the junction box.



NOTE: Use safety cable (EE) to hold the fixture to the mounting bracket (CC). Ensure the connection is secured by covering the wire connectors with electrical tape (not provided)

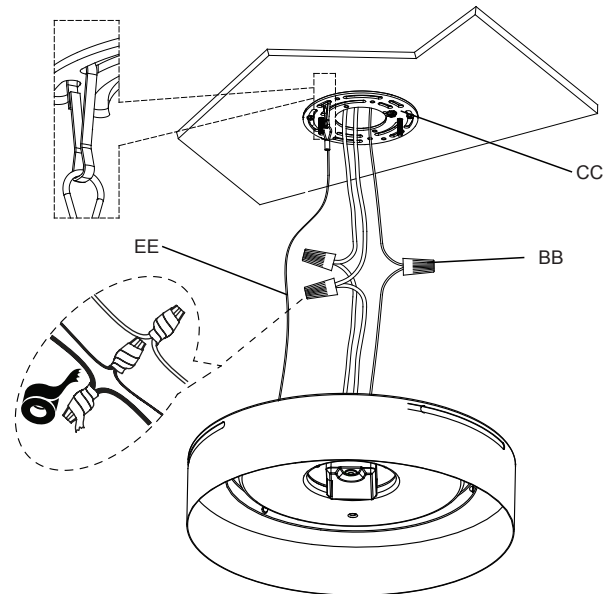


5. Installing the fixture

Align mounting screws (FF) to the keyholes on the fixture body (A) and screw the mounting finials (DD).



NOTE: Ensure the connection is secured.

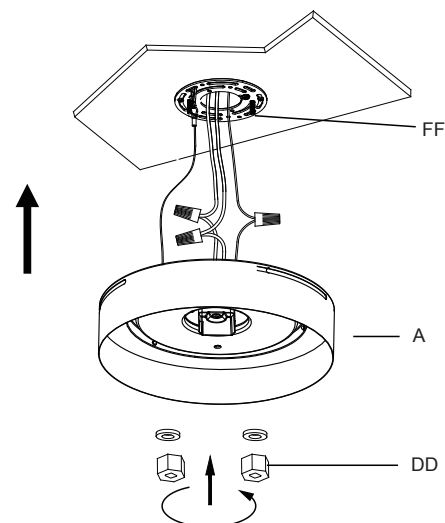


ASSEMBLY INSTRUCTIONS (continued)

6. Selecting the Desired CCT

Select the desired color temperature by pressing the CCT Selectable push button (B) .




NOTE: Choose your preferred color temperature between 2700K, 3000K, 3500K, 4000K and 5000K with switch.

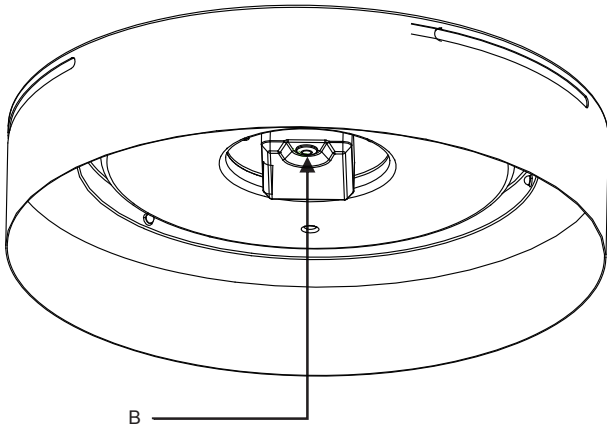

7. Attaching the Glass Shade

Align slots from the glass shade (C) to studs on the ceiling canopy and fixture body (A). Twist the glass shade (C) until it is secured.

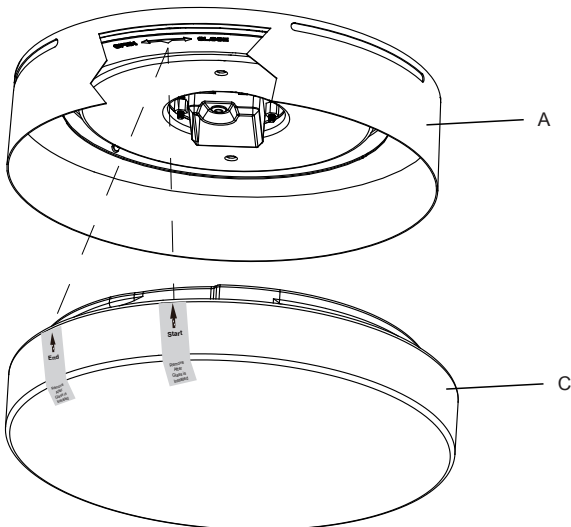

NOTE: Align the start arrow to the middle arrow on the backplate, then twist the glass clockwise until the end arrow points to the backplate arrow. remove the stickers from glass once is installed.



8. How to Operate the Fixture

This fixture is equipped with 2 options Night light and Area light

- A. Option A, Area light – This is a regular mode and is activated by flipping the wall switch once. From Off to ON position .
- B. Option B, Night light – this mode is activated by flipping the wall switch as follow
 - When Area light is OFF- flip the switch ON-OFF-ON to enter Night light mode
 - When Area light is ON- flip wall switch Off then ON to enter night light mode



NOTE: Toggle the wall switch ON and OFF within 10s to cycle through the area light mode and night light mode. If turned off over 10s, it will default to area light mode when it is turned on again.

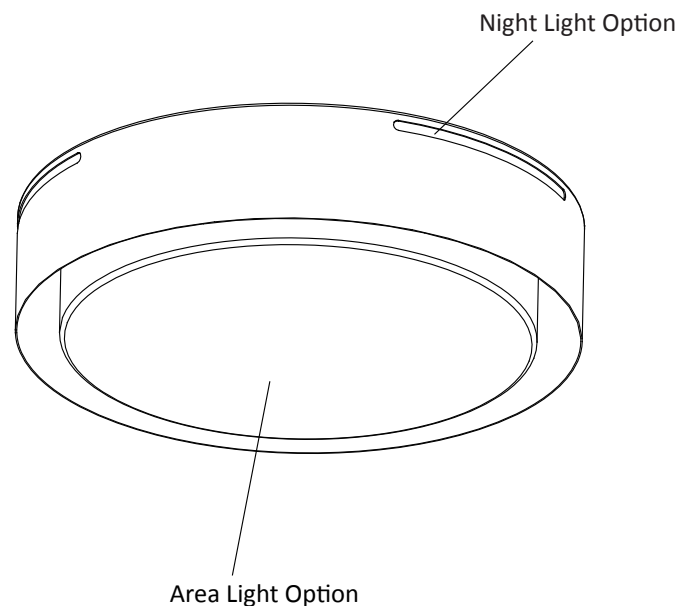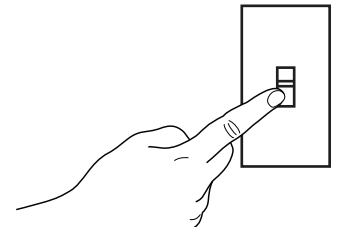

CARE AND MAINTENANCE

- To clean, turn off and wipe with a damp, non-abrasive cloth.

TROUBLESHOOTING

- 1) The light does not come on at all:
 - a) Make sure the wall switch and circuit breaker are on.
 - b) Make sure the wiring is correct.
- 2) Fuse blows or circuit trips when light is turned on.
 - a) Check for crossed wires, ensure wiring is correct.

If unable to fix any of the above issues, please consult a certified electrician.

Limited Warranty

5 YEAR LIMITED WARRANTY: LEDVANCE warrants the Product to be free from defects in material and workmanship from date of purchase for the specified warranty period when used as directed. Failure to comply with Product warnings and instructions shall void the warranty. This warranty does not cover Product subject to accident, neglect, abuse, misuse, or acts of God. If Product fails to operate according to the warranty, return Product to place of purchase with proof of purchase date and LEDVANCE will replace with the same or similar Product free. LABOR IS NOT INCLUDED. LEDVANCE reserves the sole right to examine and determine whether the Product is defective. For additional information, contact 1-800 LIGHT-BULB (1-800-544-4828); Email: lightbulb@ledvance.com. THIS IS THE EXCLUSIVE REMEDY AVAILABLE. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS EXPRESSLY EXCLUDED. SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY OR FITNESS OF USE, WHICH ARE HEREBY EXCLUDED. IF UNDER APPLICABLE STATE LAW IMPLIED WARRANTIES MAY NOT VALIDLY BE DISCLAIMED OR EXCLUDED, THE DURATION IS LIMITED TO THE SPECIFIED WARRANTY PERIOD.



Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-544-4828
Monday – Friday 7:00 a.m. – 5:00 p.m. CST