




# **Important Safety Instructions:**

Basic safety precautions should always be followed when installing, including the following:

- 1. Read all instructions.
- 2. Licensed electrician for installation only.
- 3. Always ensure the power is OFF and the fitting has cooled down before performing any maintenance, cleaning, changing the globe or adjustment to the fitting.
- 4. Do not install any luminaire near the heat source.
- 5. Do not exceed the nominal supply voltage or amperage ratings.
- To avoid injury or damage to the fitting, please ensure that power leads and screws are secure before connecting the power.

# Installation Instruction:

Fig1: Installation Spacing

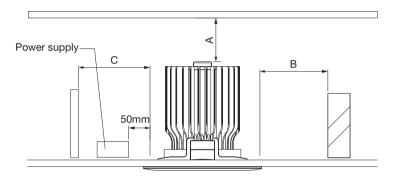

#### Installation Procedure:

# WARNING: M

- 1. Switch off before installation.
- 2. Switch on only after complete installation and examination of the circuit.
- 3. Professional electrician for installation and maintenance only.








Turn OFF power supply before starting any installation. Read instructions & check you have all the tools & accessories to complete the installation correctly.





# Downlight with external driver

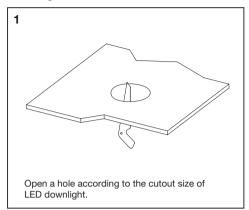

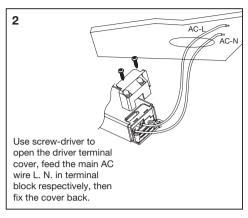

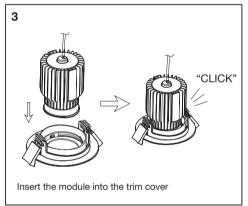

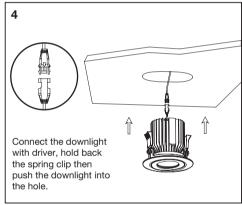

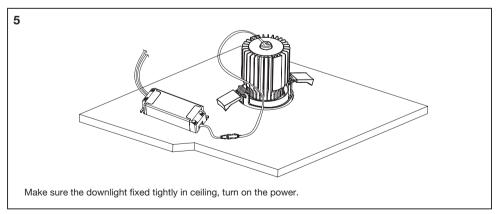

Warning: Production modification and improper installation are not valid for warranty.



### **WARNINGS:**

- This product must be installed by a licensed electrician strictly in accordance with the current revision of AS/NZS 3000 Electrical Installations (Australian/New Zealand Wiring Rules).
- Avoid touching the LEDs.
- Please do not attempt to disassemble or change the construction of the luminaire or replace any of the parts to avoid the possibility of injury or product failure.
- Please keep this manual for future reference.
- This product is designed for indoor use only. It is not intended for installation in wet areas or where the location is exposed to the elements.
- This luminaire is designed for ceiling installation only. Do not install on wall.
- The light source contained in this luminaire shall only be replaced by the manufacturer or service agent or a similar qualified person.
- Please note that the fixture is equipped with standard surge protection only. To protect the fixture from sags, surges, and lightning strikes, additional surge protectors must be deployed on the primary side.





#### **WARRANTY AGAINST DEFECTS:**

Your LED PERFORMANCE DOWNLIGHT MODULAR fitting from LEDVANCE comes with a product warranty ("Warranty") for quality assurance, the terms and conditions of which are set out in this document. The Warranty applies exclusively to LED Light Fittings from LEDVANCE purchased within Australia and New Zealand for normal domestic or commercial use. The Warranty is offered to you by:

LEDVANCE Pty Ltd Suite 2, 21A, 394 Lane Cove Road Macquarie Park NSW 2113

Phone contact: 1300 467 726 or +61 2 9481 780 Email address: technical.au@ledvance.com

IMPORTANT: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

LEDVANCE Pty Ltd ABN 34 050 103 181 Suite 2.1A 394 Lane Cove Road Macquarie Park NSW 2113 Australia Ph +61 29481 8399 www.ledvance.com.au

