

LEDVANCE PHASE EV

Installation Guide

Pedestal Extender w/Cable Management

Item No: 78136

Model: EVCPEDEXT

Pedestal extender with cable management system to be used with EVC48ALVL2C1XX (Level 2 Commercial EVSE) and EVCPED (pedestal).



WARNING

Please Read All Instructions Before Attempting Installation

- TO PREVENT PERSONAL INJURY OR PRODUCT DAMAGE ONLY LICENSED ELECTRICIANS SHOULD PROVIDE ALL INSTALLATION SERVICES.
- TO AVOID ELECTRIC SHOCK OR COMPONENT DAMAGE DISCONNECT POWER BEFORE ATTEMPTING INSTALLATION OR SERVICING.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE (NEC) AND ALL APPLICABLE FEDERAL, STATE AND LOCAL ELECTRICAL CODES AND SAFETY STANDARDS.
- ANY ALTERATION OR MODIFICATION OF THIS PRODUCT IS EXPRESSLY FORBIDDEN AS IT MAY CAUSE SERIOUS PERSONAL INJURY, DEATH, PROPERTY DAMAGE AND/OR PRODUCT MALFUNCTION.
- TO PREVENT PRODUCT MALFUNCTION AND / OR ELECTRICAL SHOCK THIS PRODUCT MUST BE PROPERLY GROUNDED.

Safety Precautions

IMPORTANT:

READ CAREFULLY BEFORE INSTALLING THE PEDESTAL EXTENDER. RETAIN FOR FUTURE REFERENCE.

GENERAL:

Upon receipt of the pedestal extender with cable management system, thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier.

What's Included

- (1) Pedestal extender w/cable management
- (4) M5 fastener screws
- (2) sets of rubber cable sleeve inserts*
- (8) M3 screws for the cable clamps*


Tools You Will Need

- Plastic pry tool
- Hex key
- Phillips screwdriver


*Save any unused cable sleeve inserts and screws for the inner cable clamp if you are only installing 1 charger on a pedestal. You will need them if you want to add another charger in the future.

Pedestal Extender w/Cable Management Installation


1. Pry and remove the rubber topper from the base pedestal.

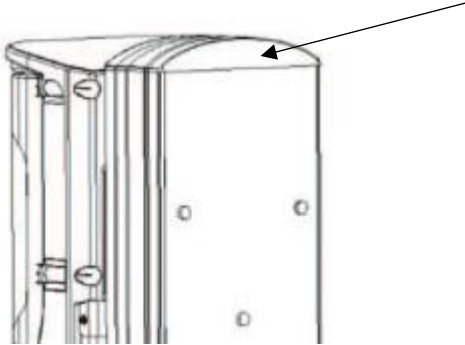

2. Next, insert the pedestal extender into the base pedestal and use the 4 included M5 screws to secure the pedestal extender into place.

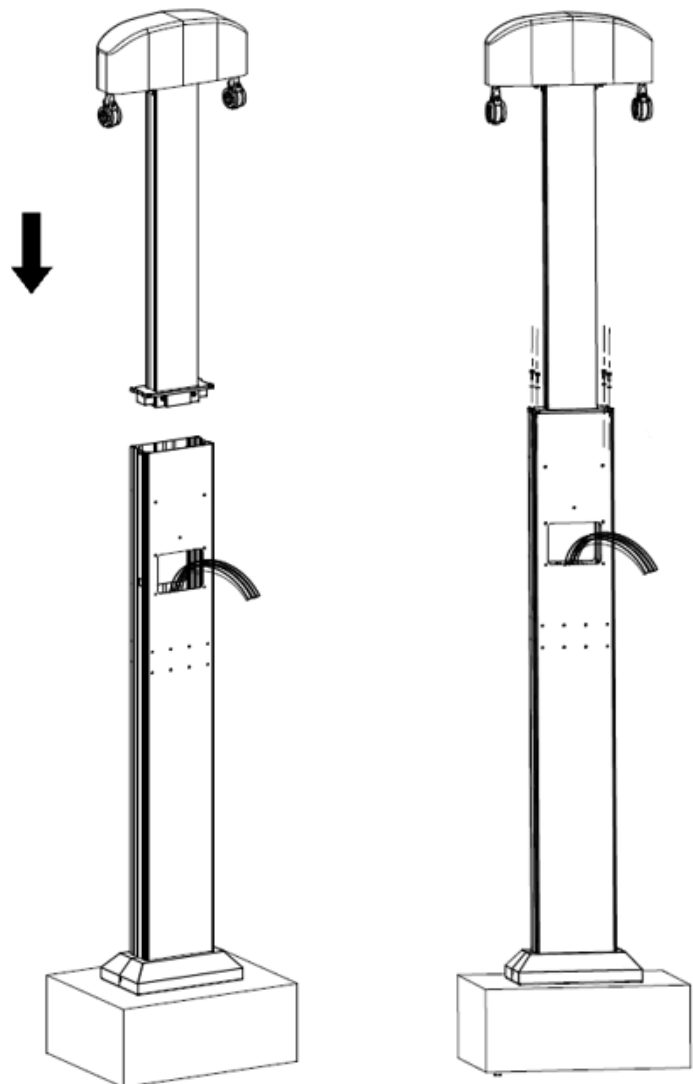

3. Pull the retractable cable clamp down and disassemble it by unscrewing the outer clamp screw to release the inner clamp and rubber sleeve inserts.

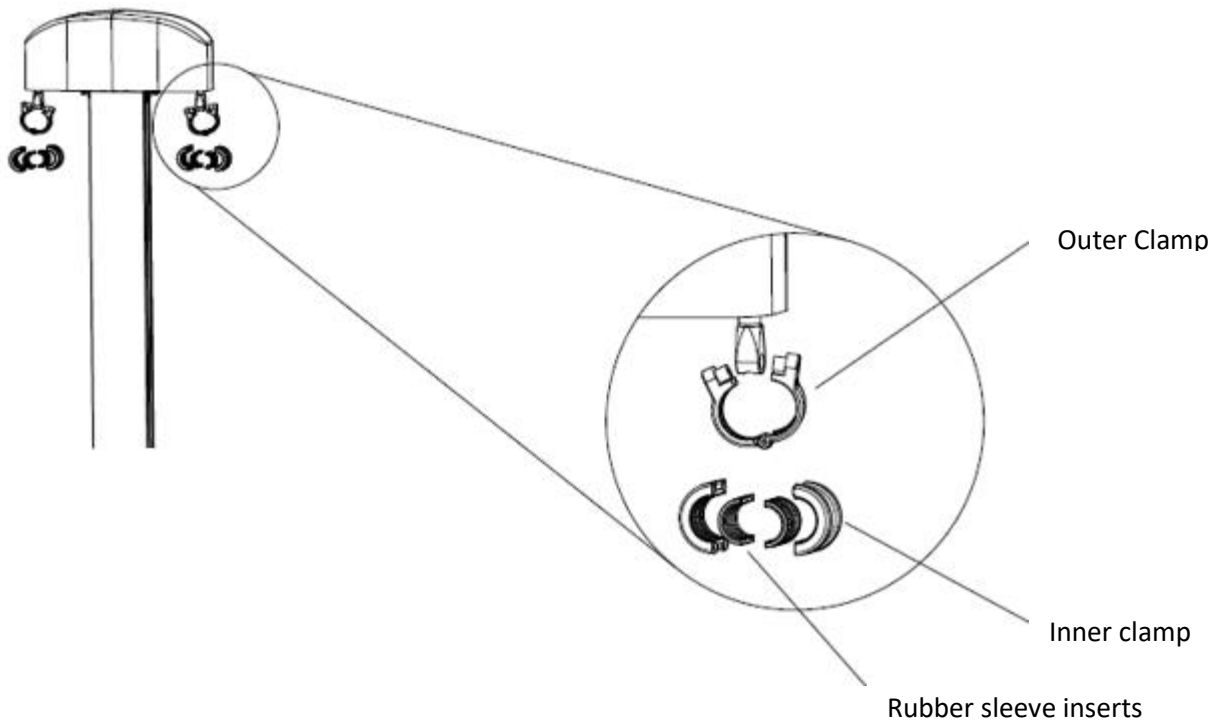

4. Use the correct size rubber sleeve inserts and attach them to the charging cable with the inner clamp. Adjust the charging cable such that it is above the ground when the cable management system is fully retracted. Lock the charging cable in place with the (4) M3 screws provided. Reattach the outer clamp.

