

LAMP BAN 2023 – SWITCH TO LED NOW

Mercury containing and inefficient lamps may gradually no longer be placed on the market in 2023.

| | | | | |
|--|-----------------------------------|--|------------------------------------|-----------------------------|
| | CIRCULAR FLUORESCENT LAMPS T5/T9* | COMPACT FLUORESCENT LAMPS with plug-in bases (CFLni-2pin/4pin) | LINEAR FLUORESCENT LAMPS T5 and T8 | HALOGEN PINS G4, GY6.35, G9 |
| Products affected | | | | |
| 2023 | ➔ 25.02. | | ➔ 25.08. | ➔ 01.09. |
| LEDVANCE LED replacement products | | | | |

*T9 phase-out by LEDVANCE

4 OPTIONS FOR ALL SITUATIONS – HOW TO SWITCH

| SOLUTIONS WITH LED TUBES | | SOLUTIONS WITH LED LUMINAIRES | |
|---|--|---|---|
| RETROFIT | CONVERSION | UPGRADE | NEW INSTALLATION |
| | | | |
| Simple 1:1 replacement on CCG or compatible ECG | Rewiring – LED tube on mains voltage or LED TUBE External System consisting of T5/T8 LED tube and external DALI-2 driver | Upgrade of existing T5 and T8 metal louver luminaires using luminaire-in-luminaire principle: LINEAR MAGNETIC BATTEN T5 | Large range of innovative LED luminaires for complete replacement |
| | | | |

HOW TO CHOOSE THE RIGHT LED TUBE

| T5 LUMINAIRE WITH G5 BASE | | | |
|---|---|--|---|
| <p>Existing ECG compatible with LED TUBE T5 HF</p> <p>↓</p> <p>RETROFIT with LED TUBE T5 HF</p> | <p>Existing ECG not compatible with LED TUBE T5 HF</p> <p>↓</p> <p>CONVERSION with LED TUBE T5 AC MAINS</p> | | |
| T8 LUMINAIRE WITH G13 BASE | | | |
| <p>CCG with starter</p> <p>↓</p> <p>RETROFIT: ON CCG with LED TUBE T8 EM or UNIVERSAL</p> <p>↓</p> <p>CONVERSION with LED TUBE T8 EM or UNIVERSAL</p> | <table border="0"> <tr> <td> <p>Existing ECG not compatible with LED TUBE T8 HF/UNIVERSAL</p> <p>↓</p> <p>CONVERSION with LED TUBE T8 EM or UNIVERSAL</p> </td> <td> <p>Existing ECG compatible with LED TUBE T8 HF/UNIVERSAL</p> <p>↓</p> <p>RETROFIT: ON ECG with LED TUBE T8 HF or UNIVERSAL</p> </td> </tr> </table> | <p>Existing ECG not compatible with LED TUBE T8 HF/UNIVERSAL</p> <p>↓</p> <p>CONVERSION with LED TUBE T8 EM or UNIVERSAL</p> | <p>Existing ECG compatible with LED TUBE T8 HF/UNIVERSAL</p> <p>↓</p> <p>RETROFIT: ON ECG with LED TUBE T8 HF or UNIVERSAL</p> |
| <p>Existing ECG not compatible with LED TUBE T8 HF/UNIVERSAL</p> <p>↓</p> <p>CONVERSION with LED TUBE T8 EM or UNIVERSAL</p> | <p>Existing ECG compatible with LED TUBE T8 HF/UNIVERSAL</p> <p>↓</p> <p>RETROFIT: ON ECG with LED TUBE T8 HF or UNIVERSAL</p> | | |


YOU'LL FIND MORE INFORMATION HERE:

| | |
|--|--|
| <p>LAMP FINDER Find an alternative LED lamp solution for your traditional lamp: ledvance.com/lampfinder</p> | <p>COMPATIBILITY Check which LEDVANCE LED lamps your ECG is compatible with: ledvance.com/ecg-compatibility or ledvance.com/tubefinder</p> |
| <p>CUSTOMER SERVICE CENTER: kundenservice@ledvance.com Germany: Tel.: +49 89 780673-660 Austria: Tel.: +43 1 68068</p> | <p>EM OR HF? Are you wondering which technology you need for your T8 luminaire? Here's an easy way to find out: ledvance.com/led-tubes-special</p> |

LAMP BAN 2023

SWITCH TO LED NOW

Mercury containing and inefficient lamps may gradually no longer be placed on the market in 2023.

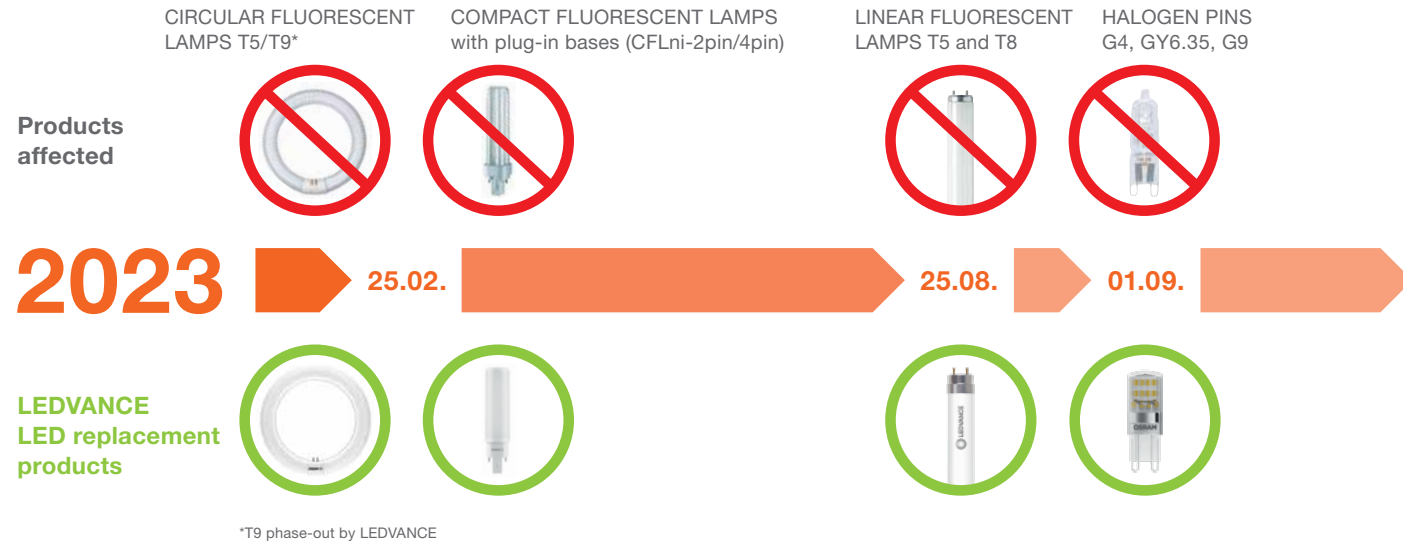

4 OPTIONS FOR ALL SITUATIONS – HOW TO SWITCH




RETROFIT




Simple 1:1 replacement on CCG or compatible ECG

CONVERSION

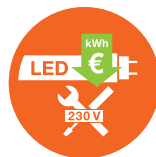

Rewiring – LED tube on mains voltage or LED TUBE External System consisting of T5/T8 LED tube and external DALI-2 driver

UPGRADE

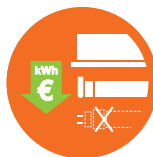

Upgrade of existing T5 and T8 metal louver luminaires using luminaire-in-luminaire principle: LINEAR MAGNETIC BATTEN T5

NEW INSTALLATION



Large range of innovative LED luminaires for complete replacement



HOW TO CHOOSE THE RIGHT LED TUBE

T5 LUMINAIRE WITH G5 BASE



T8 LUMINAIRE WITH G13 BASE



YOU'LL FIND MORE INFORMATION HERE:

LAMP FINDER
Find an alternative LED lamp solution for your traditional lamp:
ledvance.com/lampfinder

COMPATIBILITY
Check which LEDVANCE LED lamps your ECG is compatible with:
ledvance.com/ecg-compatibility or ledvance.com/tubefinder

CUSTOMER SERVICE CENTER:
kundenservice@ledvance.com
Germany: Tel.: +49 89 780673-660
Austria: Tel.: +43 1 68068

EM OR HF?
Are you wondering which technology you need for your T8 luminaire? Here's an easy way to find out:
ledvance.com/led-tubes-special